

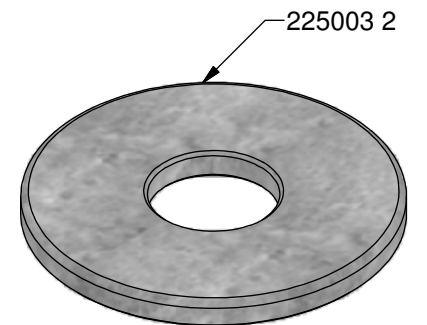
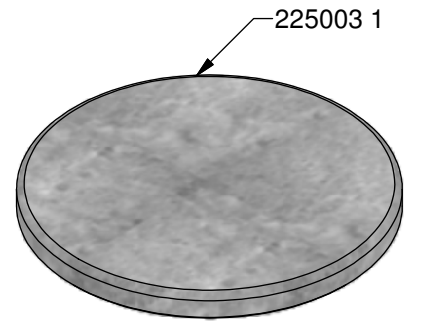
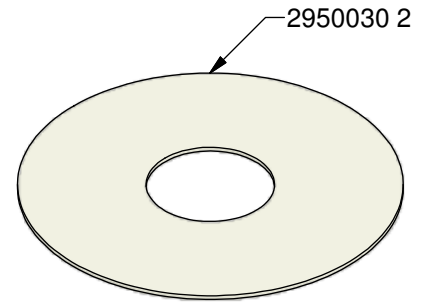
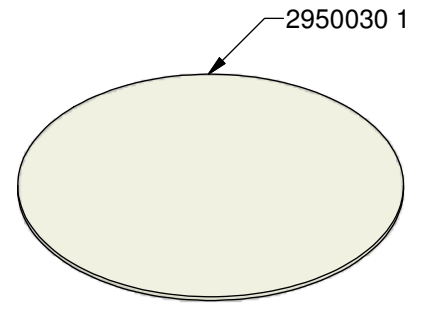
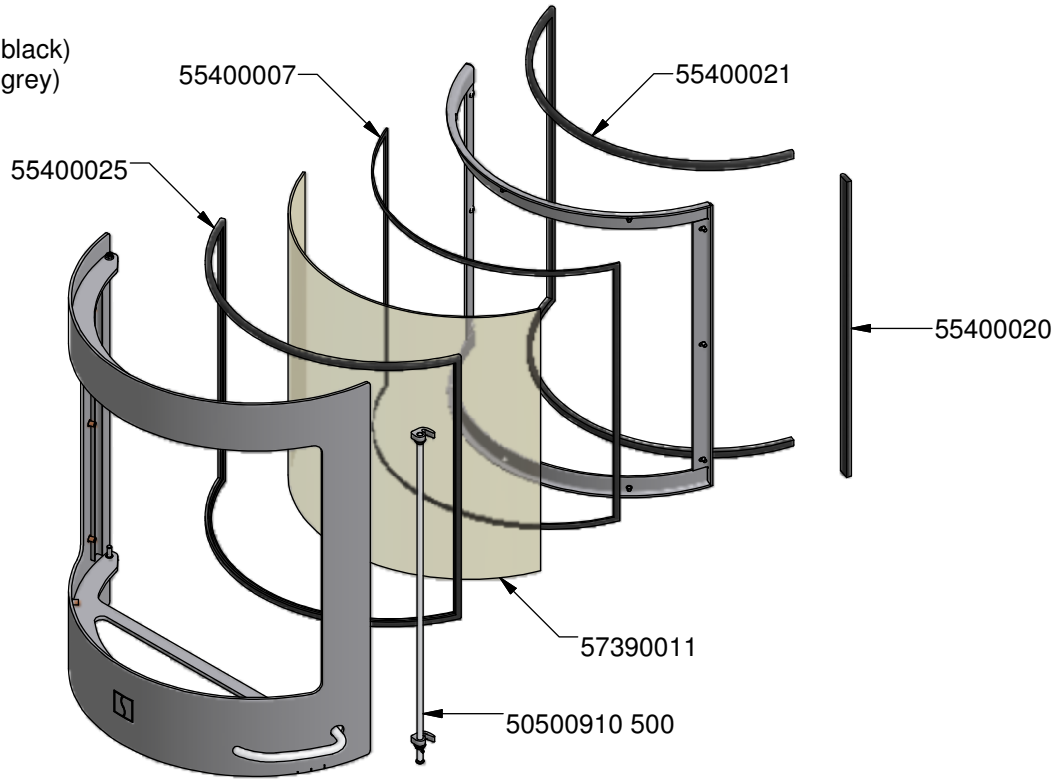
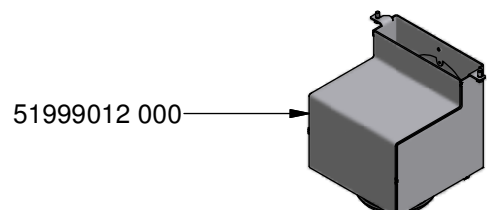
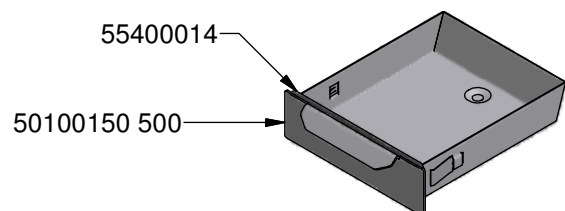
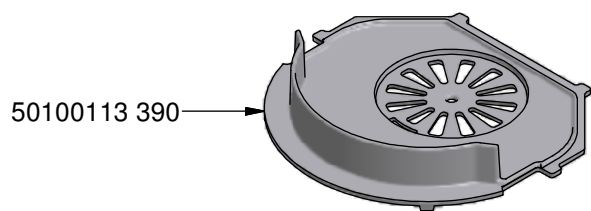







Door complete:
 56500010 014 (black)
 56500010 114 (grey)

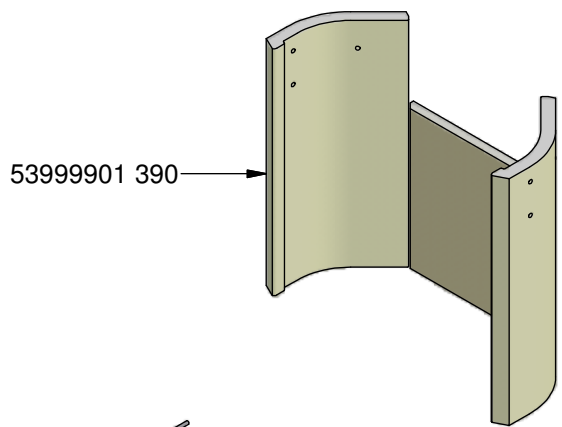




01500 Scan 50

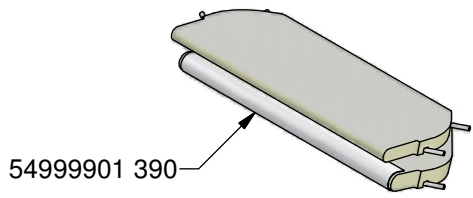











345001 0 (steel black)
 345001 1 (steel grey)
 355001 (glass)

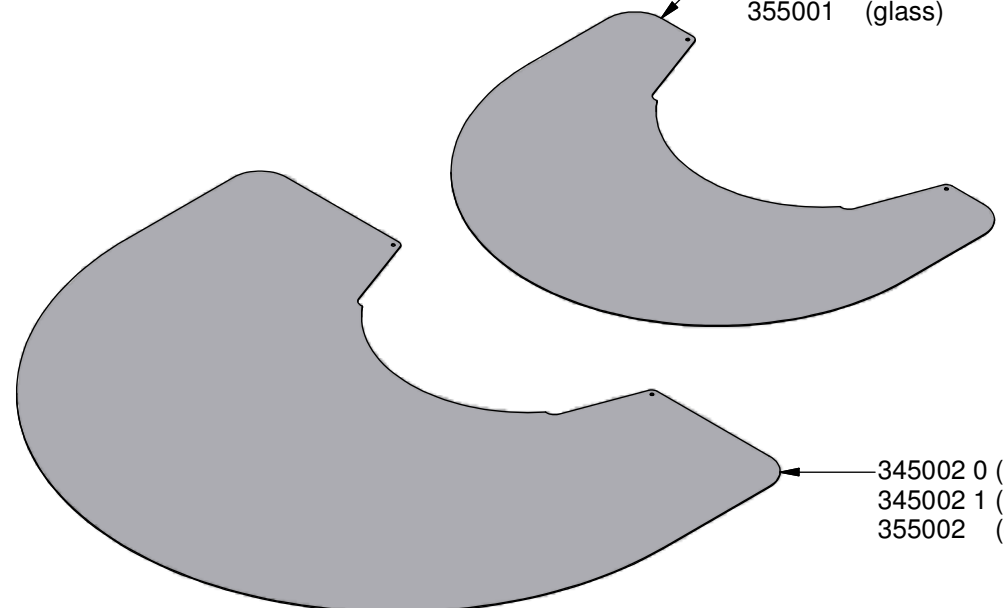


Door complete:
 56500010 014 (black)
 56500010 114 (grey)

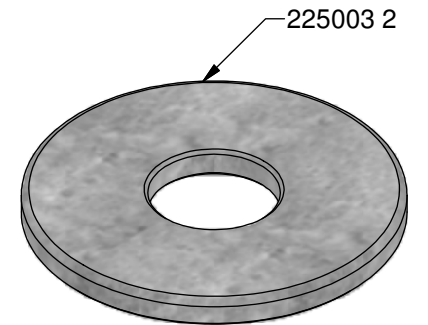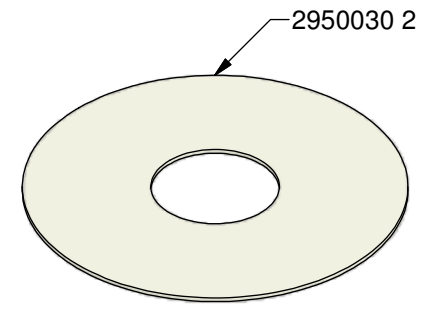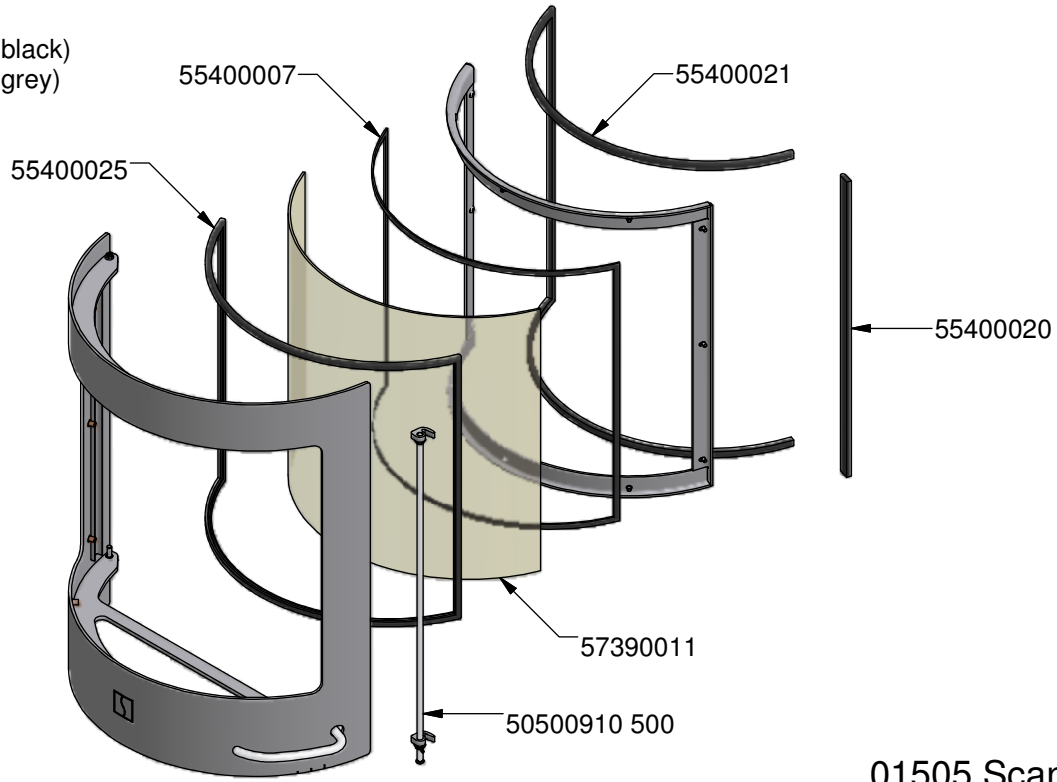


01505 Scan 50-5

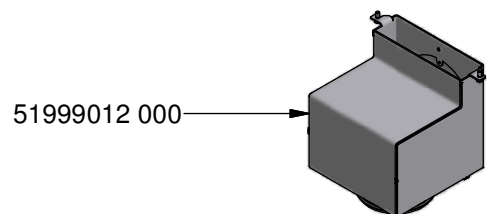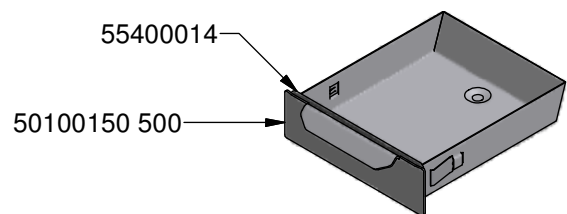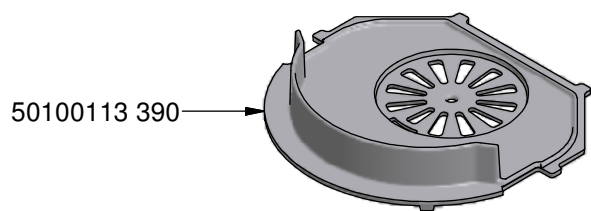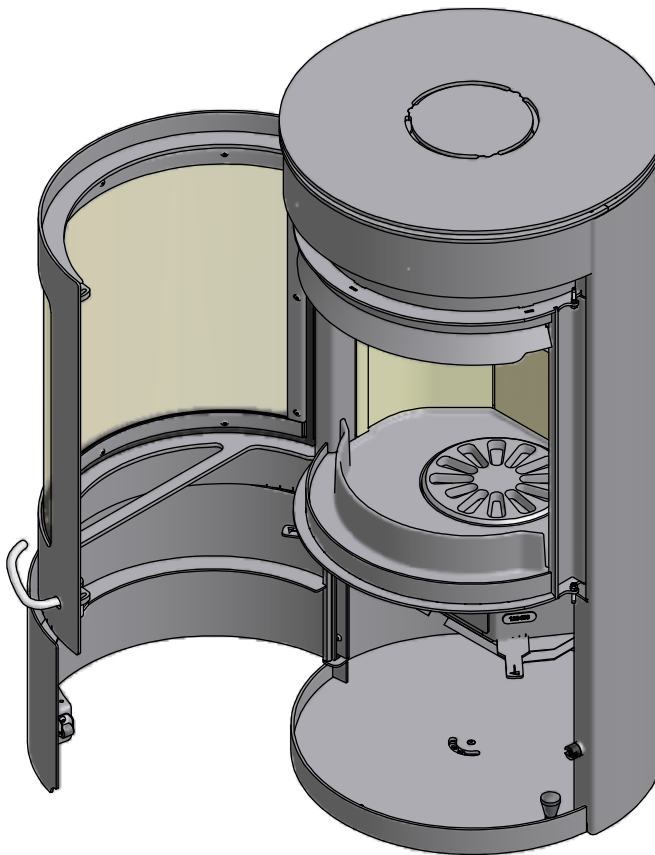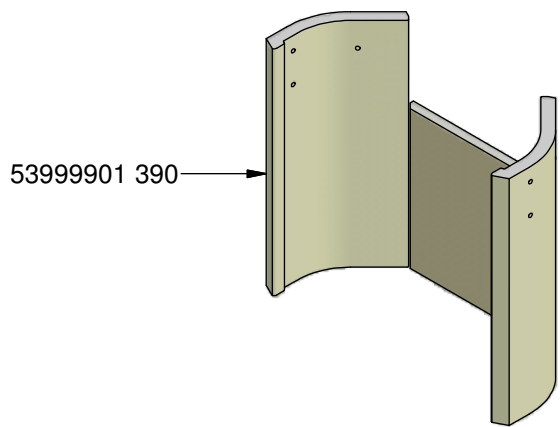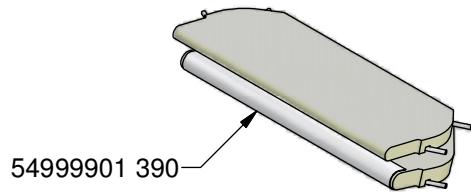






345001 0 (steel black)
 345001 1 (steel grey)
 355001 (glass)

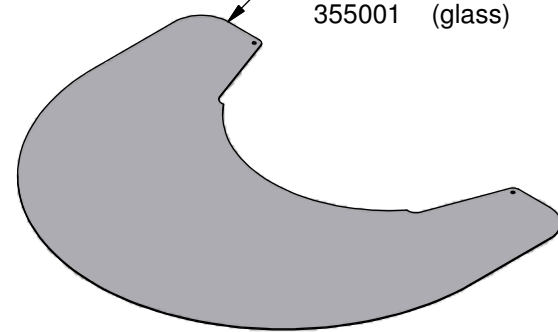











345002 0 (steel black)
 345002 1 (steel grey)
 355002 (glass)

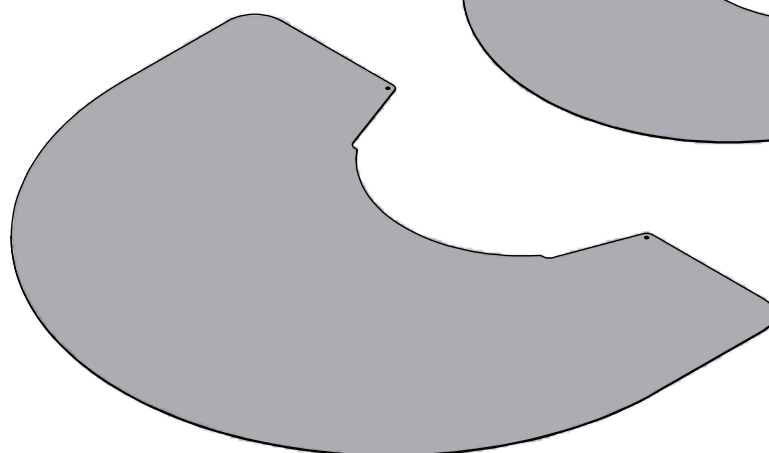


Door complete:
 56500010 014 (black)
 56500010 114 (grey)

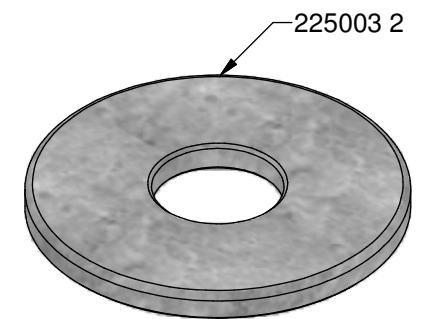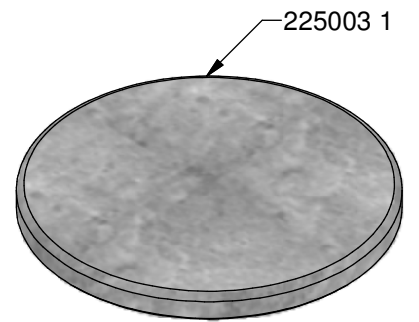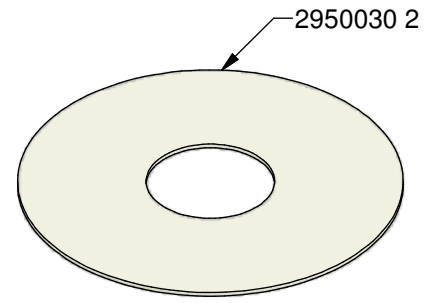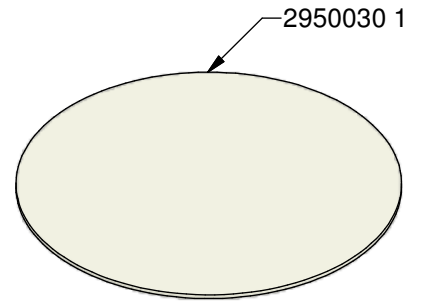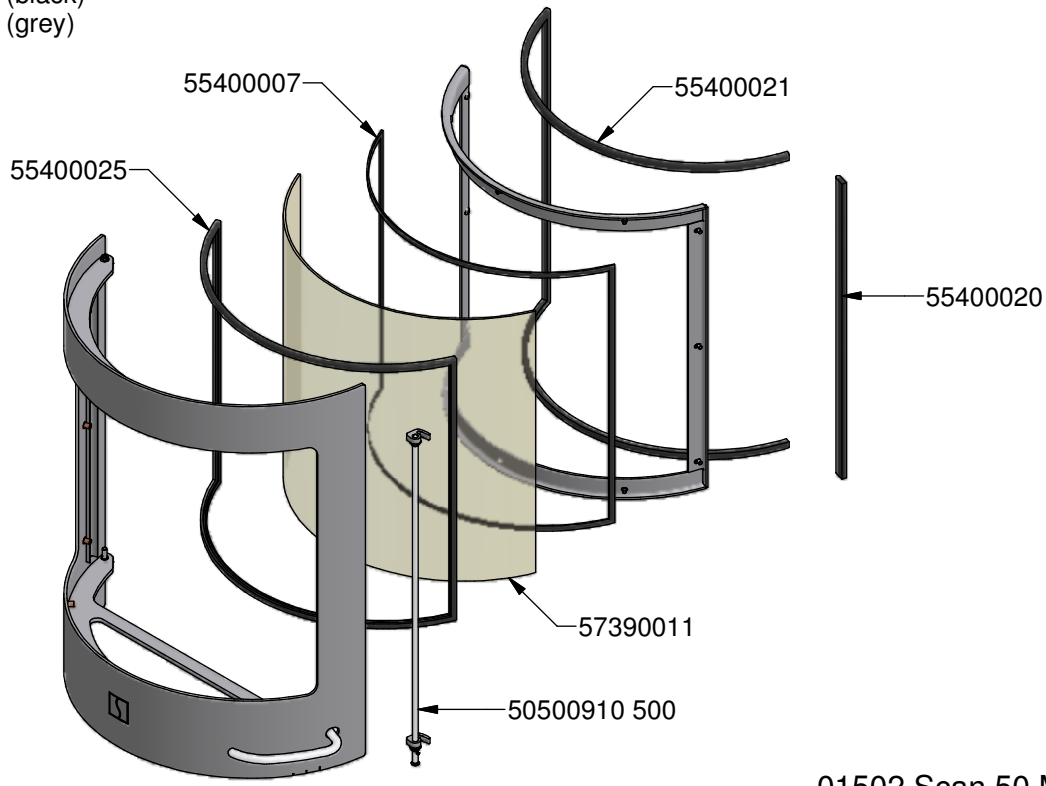


01502 Scan 50 Maxi

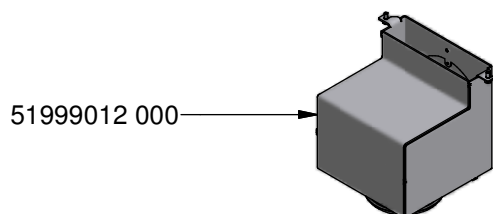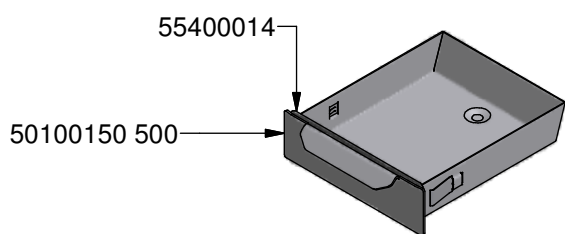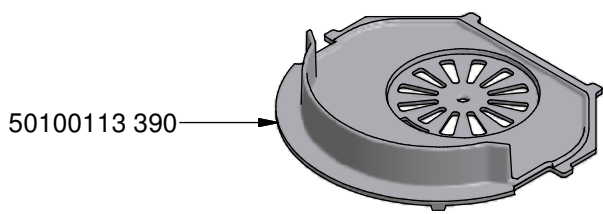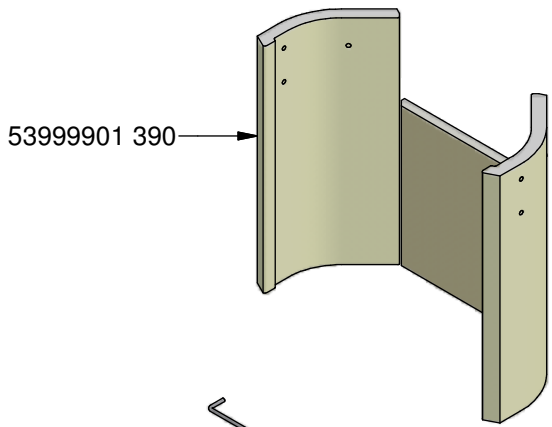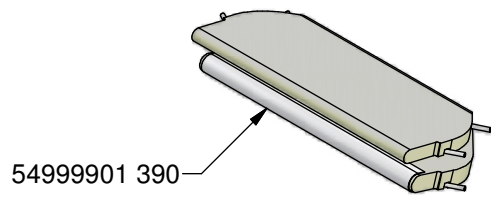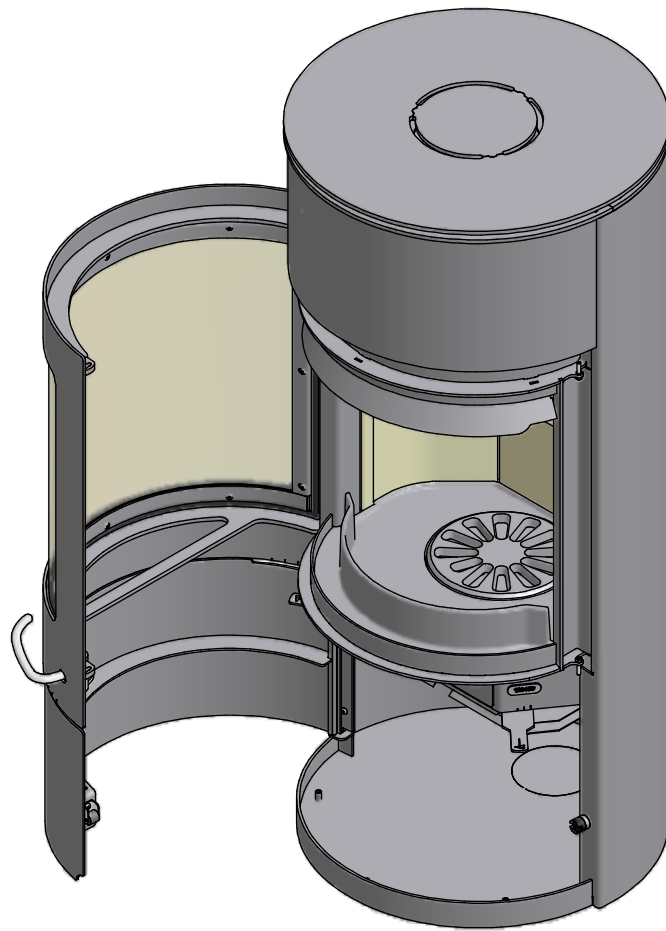







345001 0 (steel black)
 345001 1 (steel grey)
 355001 (glass)

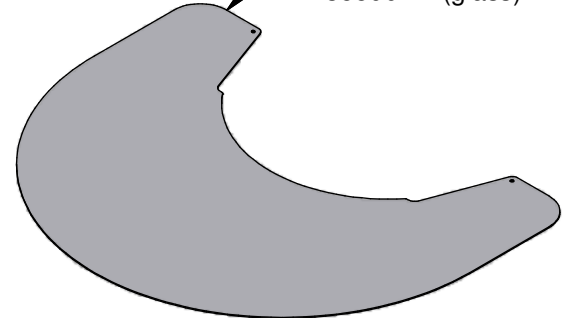














345002 0 (steel black)
 345002 1 (steel grey)
 355002 (glass)

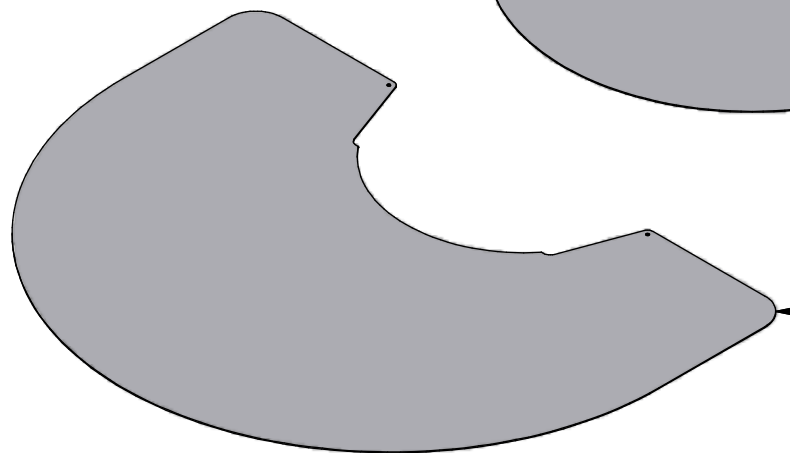



Door complete:
 56500010 014 (black)
 56500010 114 (grey)

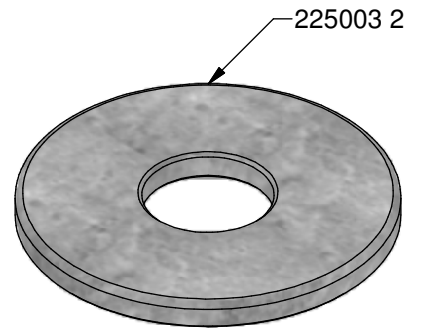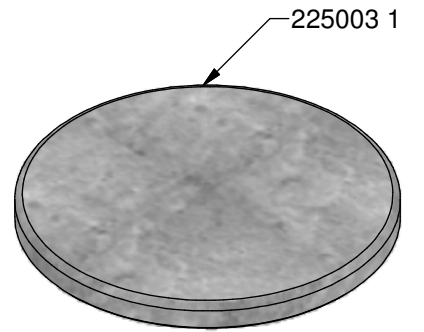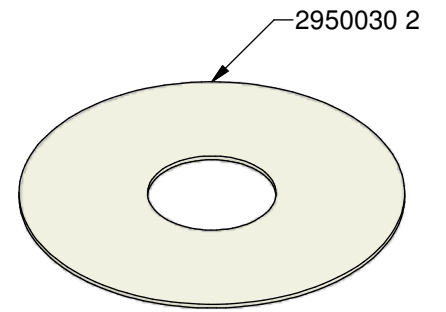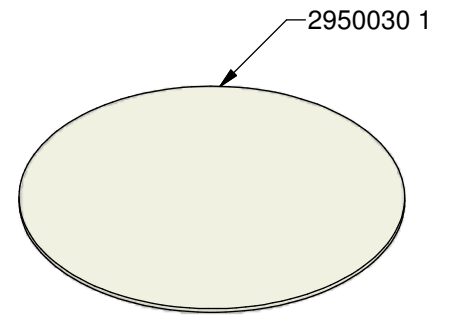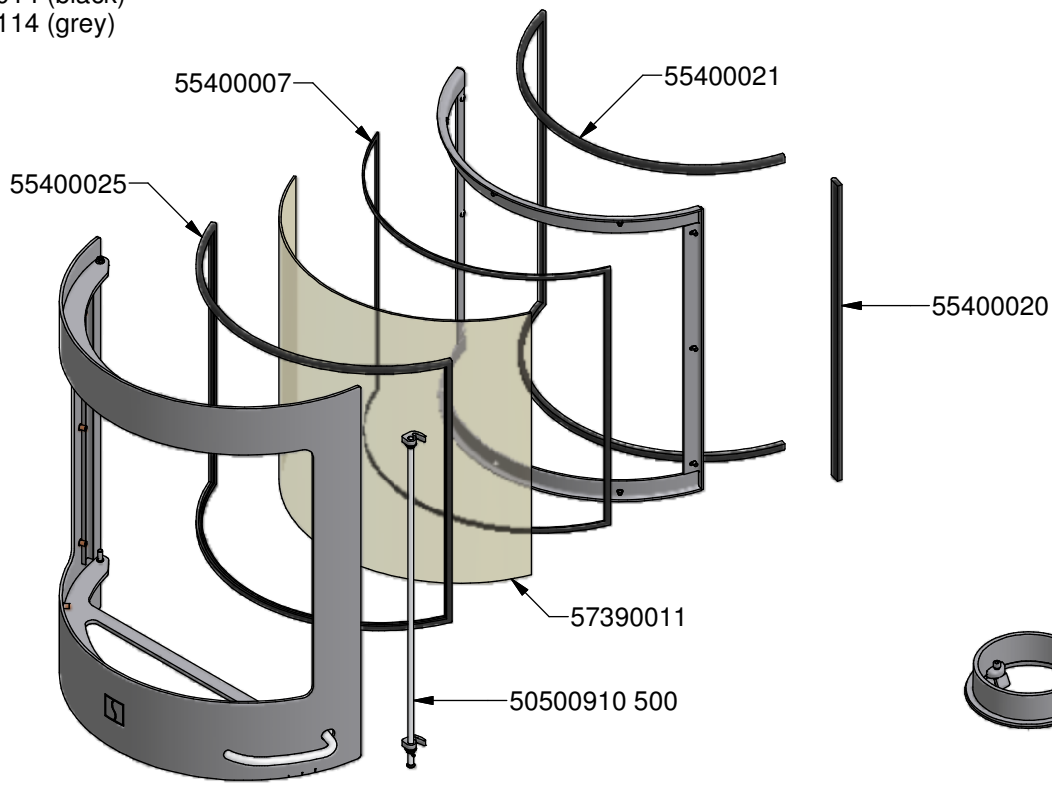

01508 Scan 50-8

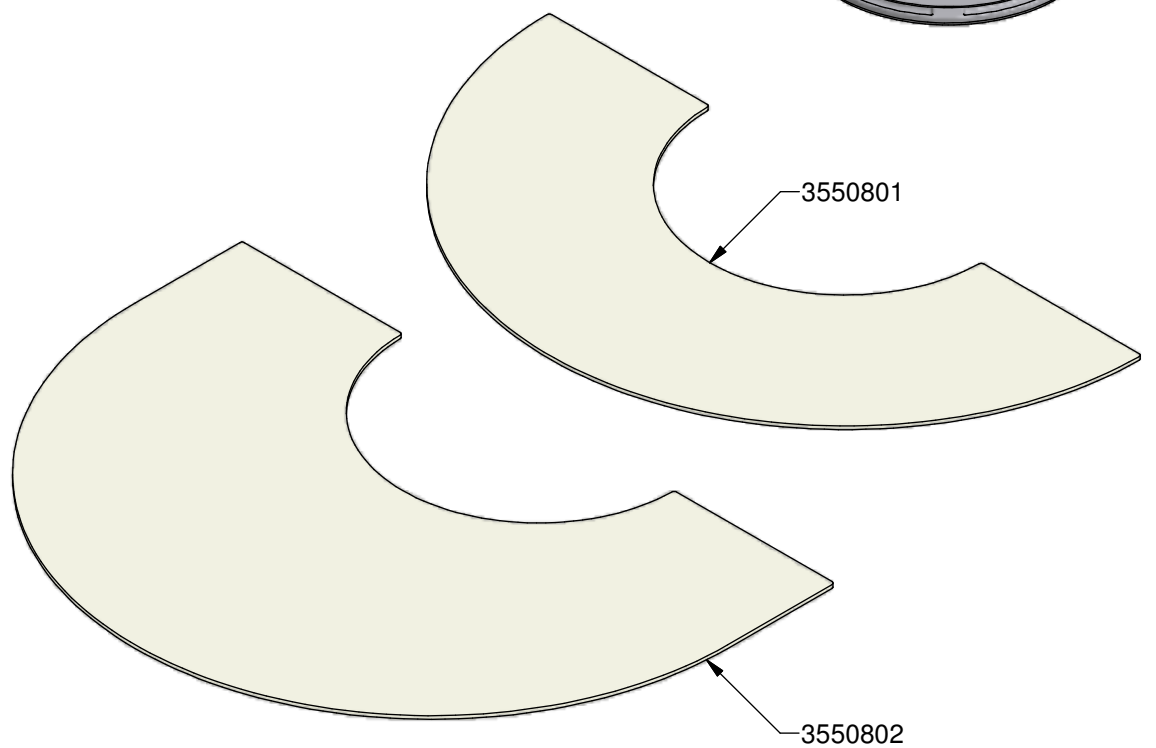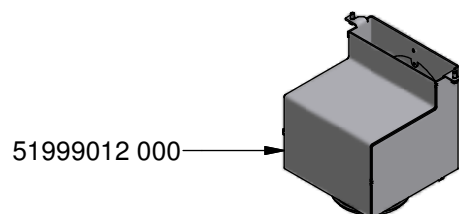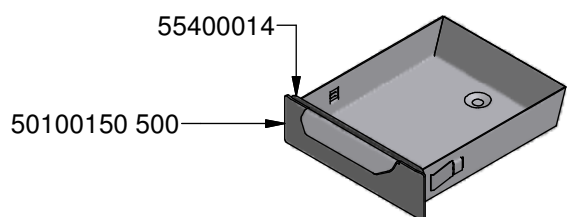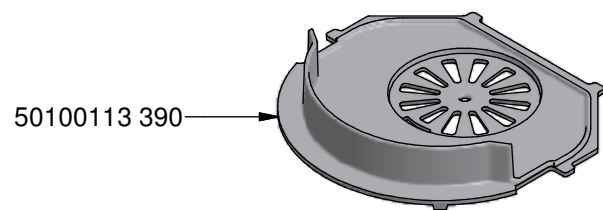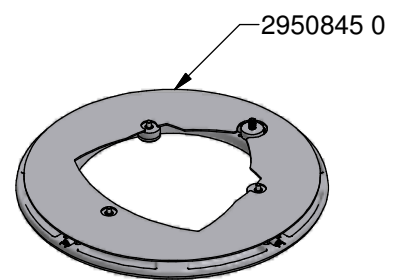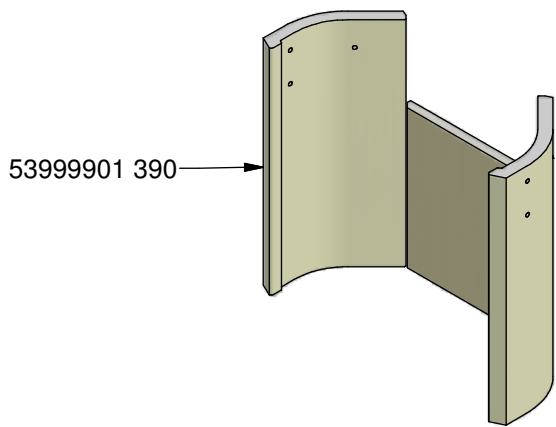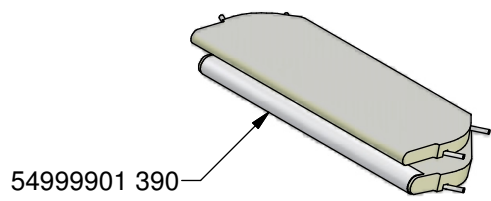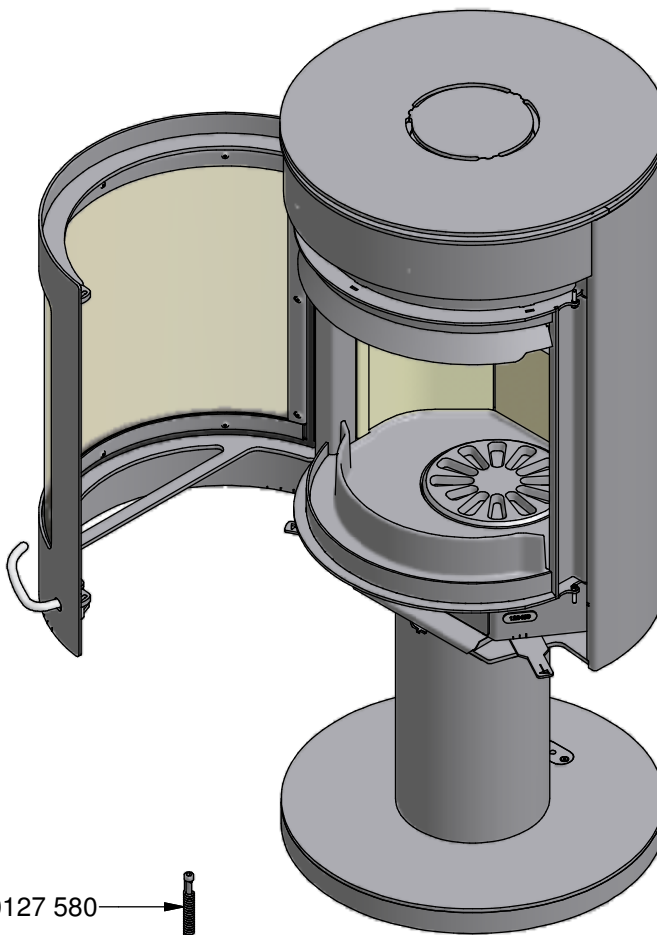

Door complete:
 56500010 014 (black)
 56500010 114 (grey)

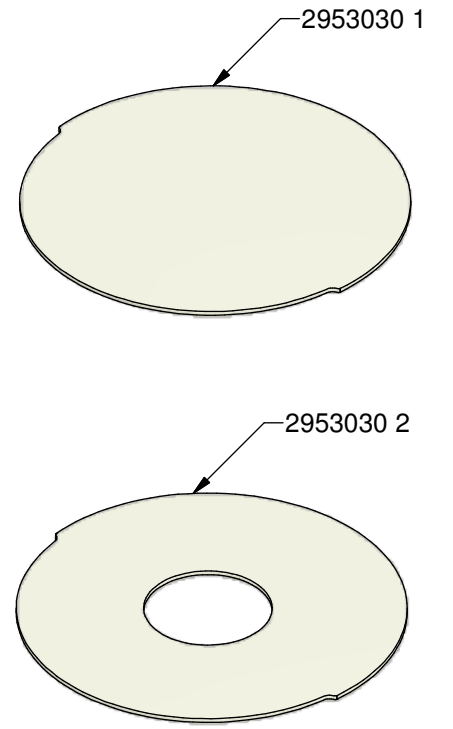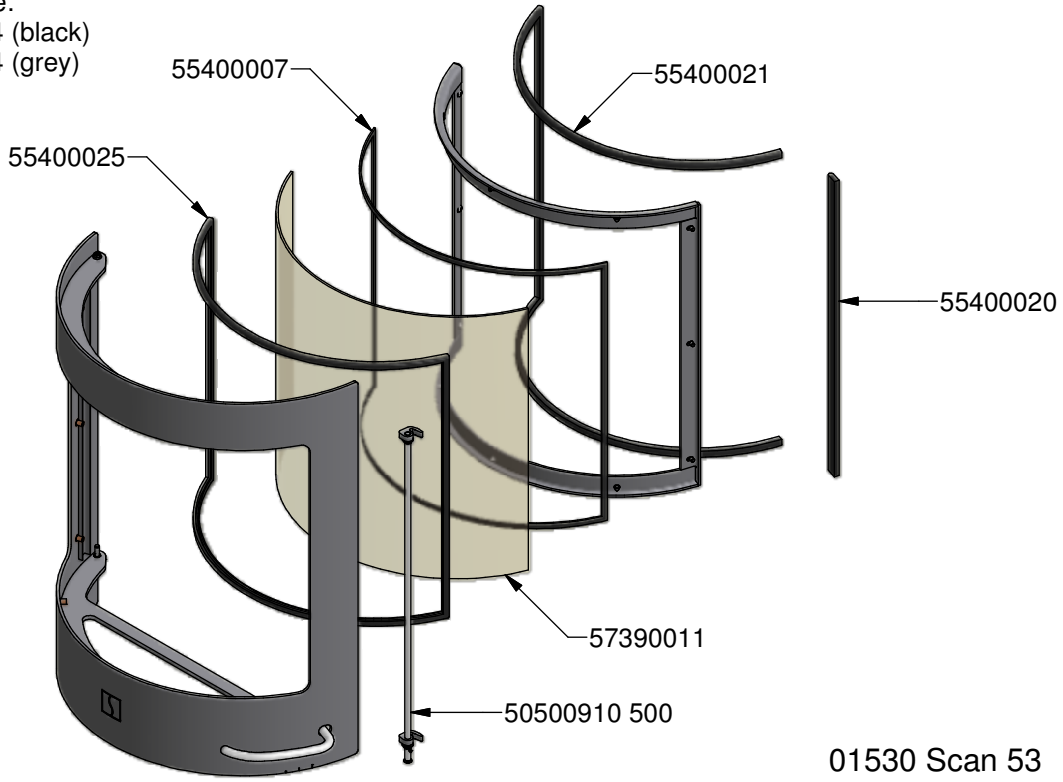

01530 Scan 53

