


decoflame® Montreal Clear Manual 800 Open front and back


1000x400x408mm, Black

1x 110mm low glass front and 1x full glass "CLEAR" back



Wall cut-out "1010x410x408mm"

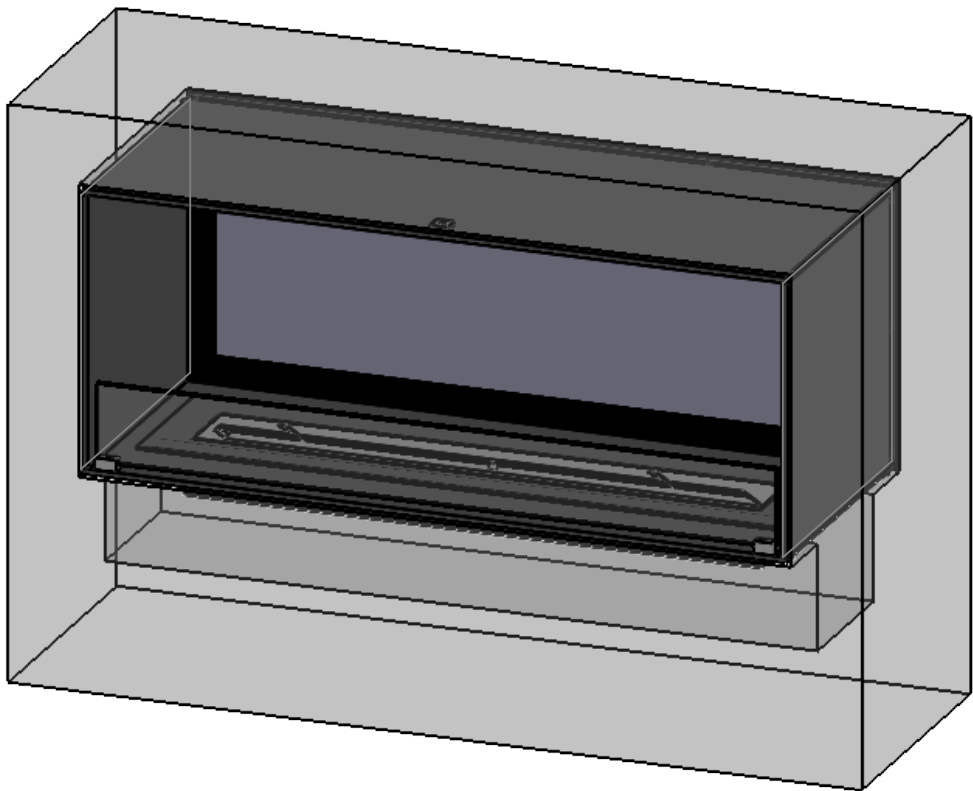


**ATTENTION**  
Reservations are made for glass tolerances both in length and height of ± 2.5mm and in thickness of ± 0.3mm according to DS/EN 12150.

Dimensions are in millimeters		 <div>DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com</div>	<b>SCALE: 1:10</b>
REVISION:	Date		FORMAT: A3
-	14-07-2021		Page 1 OF 4
Author: TTK		Order Number - Customer - Reference:	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		PRINCIPLE Montreal Clear Front and Back - conv. 1000x400x408mm - 1x MB800 - low high glass	
		Customer Approval Signature - Date	

Montreal - Open to front and back

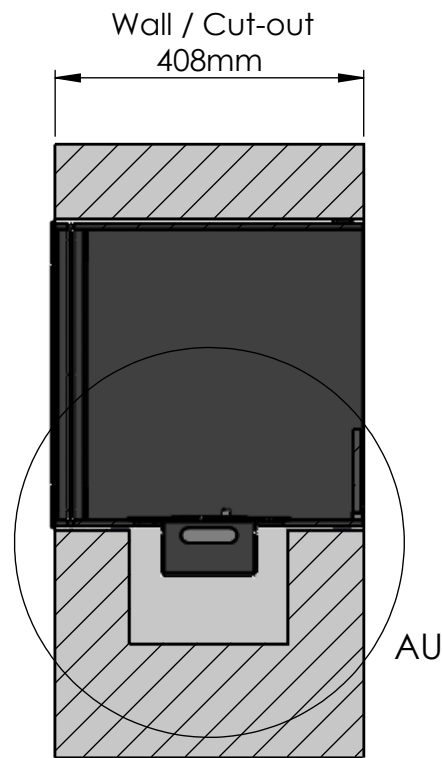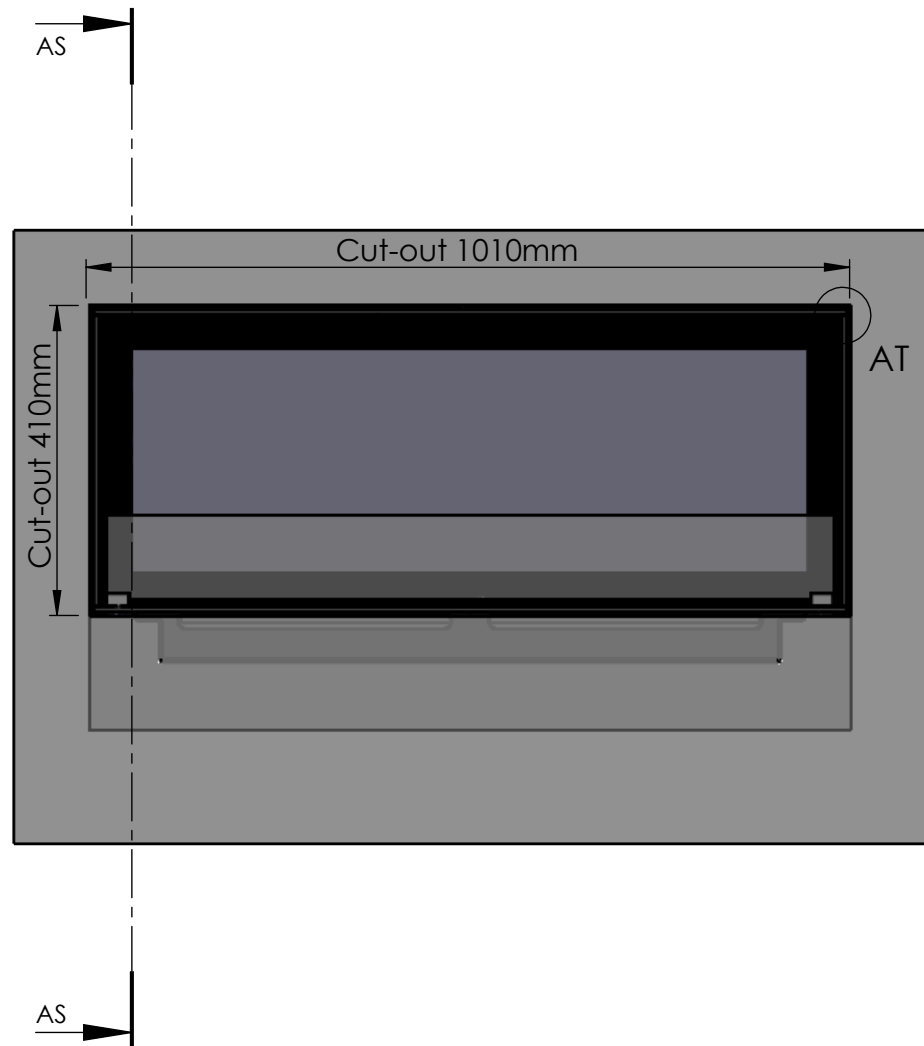



SECTION AS-AS  
SCALE 1 : 10

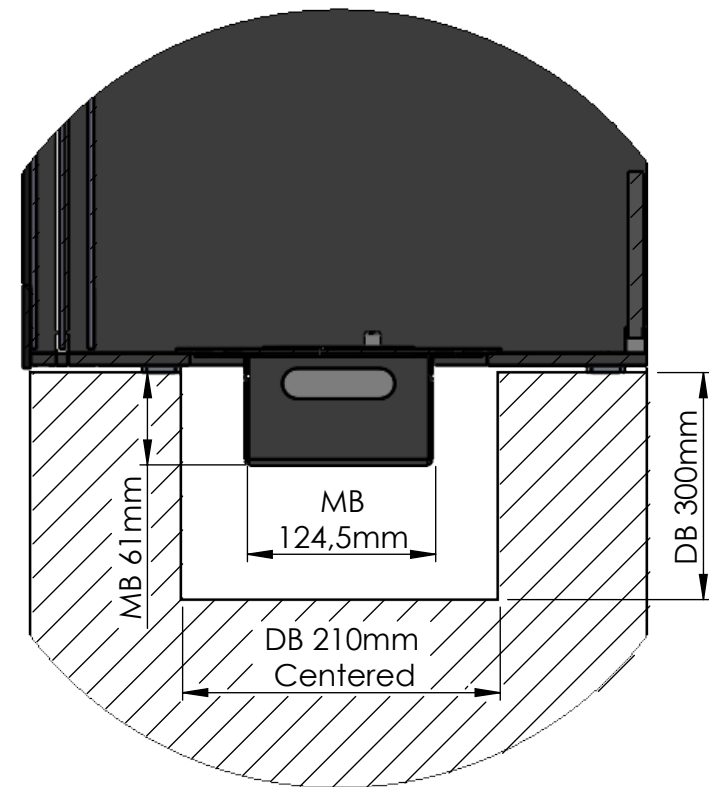

DETAIL AU  
SCALE 1 : 5

**MB: Manuel Burner**  
**DB: Electrical burner (Denver Basic)**

Wall cut-out dimensions

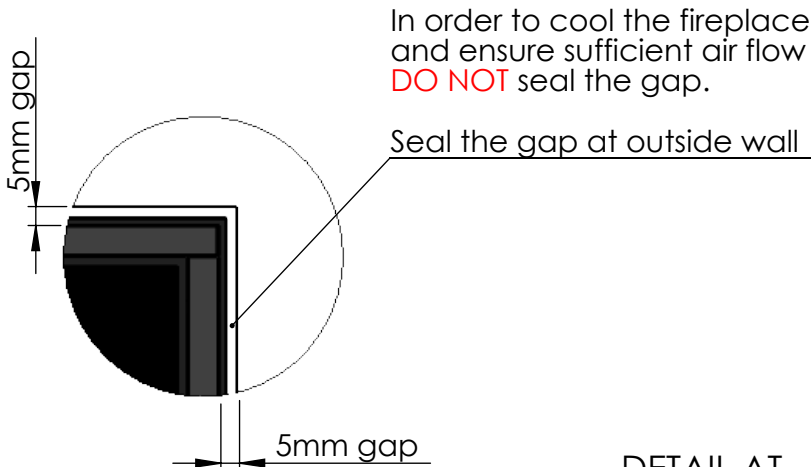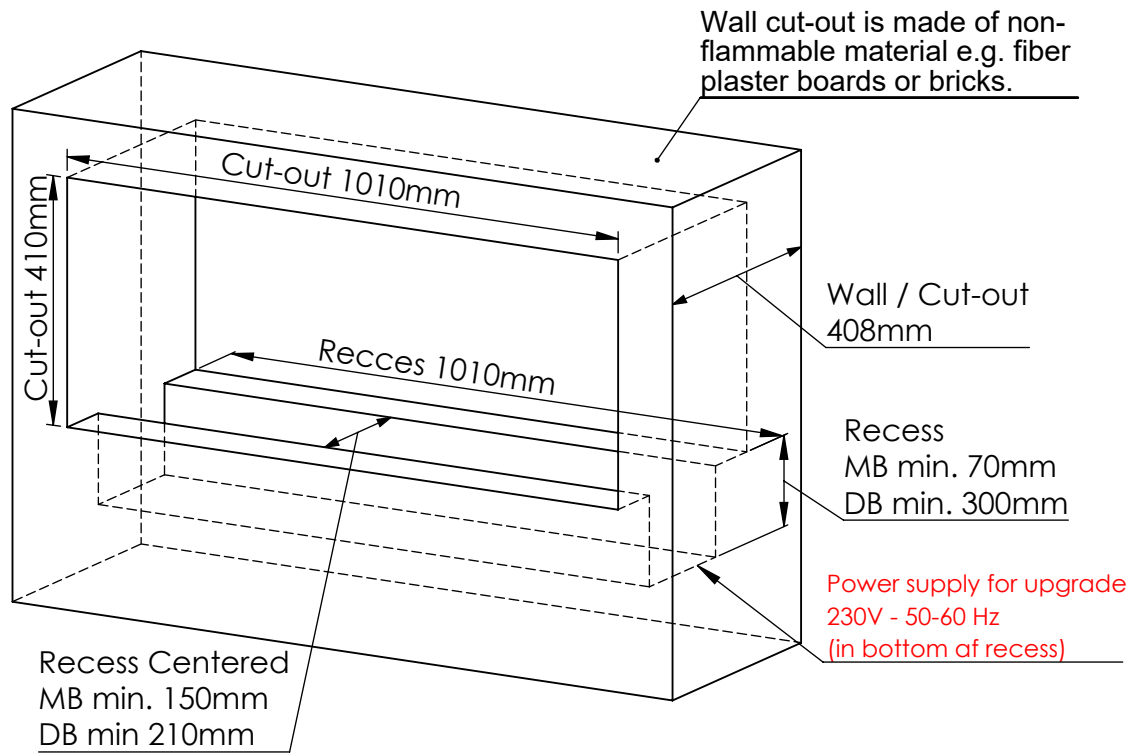


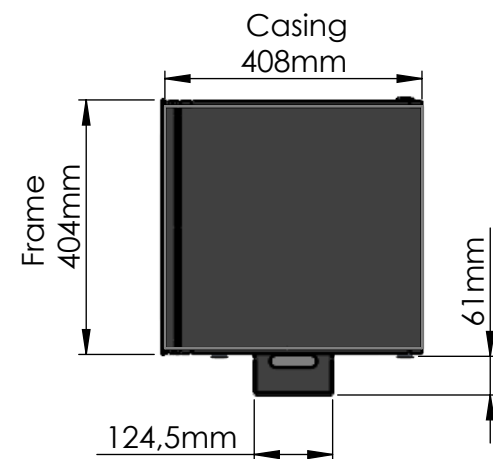
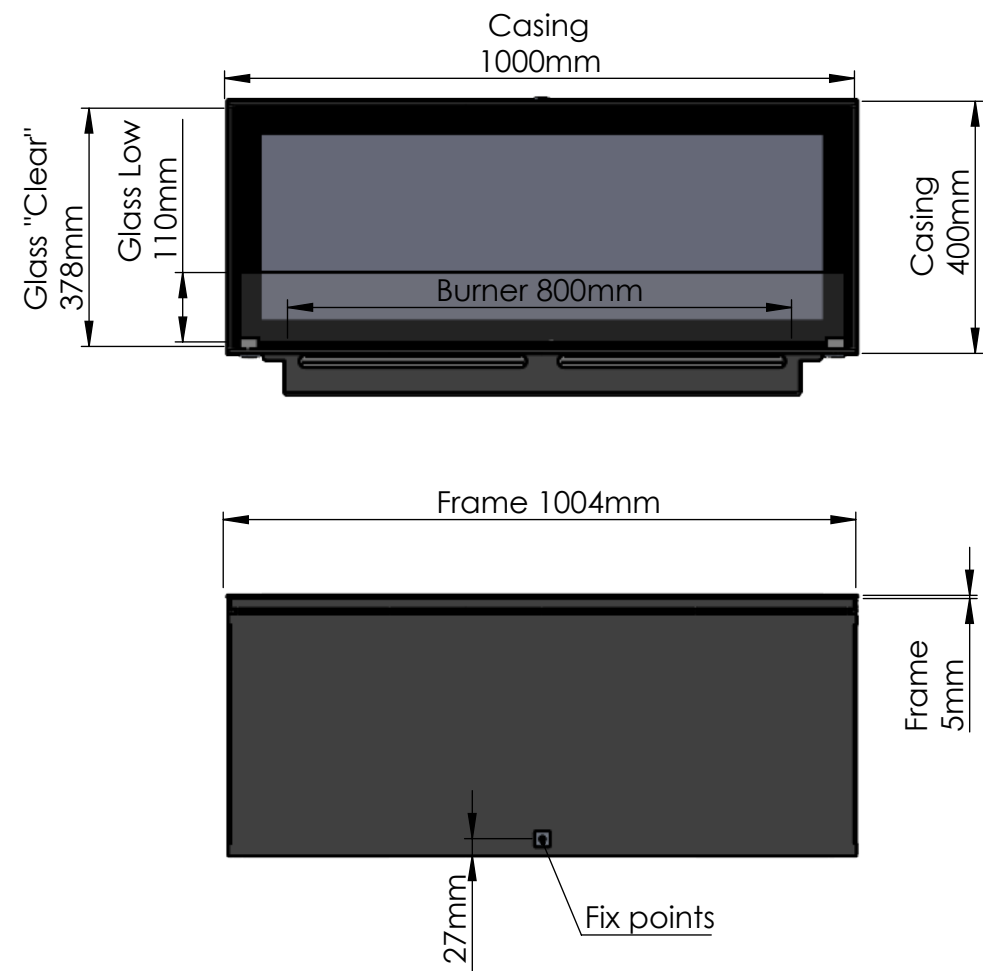
DETAIL AT  
SCALE 1 : 2

NOTE

It is possible to change the burner unit, if you want to upgrade your fireplace from a manuel burner to an electrical burner

If only a manual burner is required, the recess is: W=150mm D=70mm  
By changing from manuel burner to electrical burner, the recess is: W=210mm D=150mm

Dimensions are in millimeters		 <div>DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com</div>	SCALE: 1:12
REVISION: -	Date 14-07-2021		FORMAT: A3
Author: TTK		Order Number - Customer - Reference: PRINCIPLE Montreal Clear Front and Back - conv. 1000x400x408mm - 1x MB800 - low high glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	



Montreal - Open to front and back

## General Installation Guidelines for "decoflame® made to measure fireplaces", open to two sides:

It is essential to maintain a 5mm gap all the way around the fireplace (Cut-out = Fireplace Dimensions + 10mm) This gap must not be sealed.

As the edges of the cut-out remain visible it is important that they are done to the highest possible finish. All four corners of the cut out must have exactly a 90 degree angle.

### Plasterboard walls - Stud-walls

All surfaces inside the wall cut-out are to be covered with fibre plaster sheets or other non-flammable materials.


### Stone/Brick walls

The cut-out is made according to the attached drawing.

### Important

Make sure to create a closed cavity for the section below the base plate of the fire and above the roof of the fireplace.

## Installation process

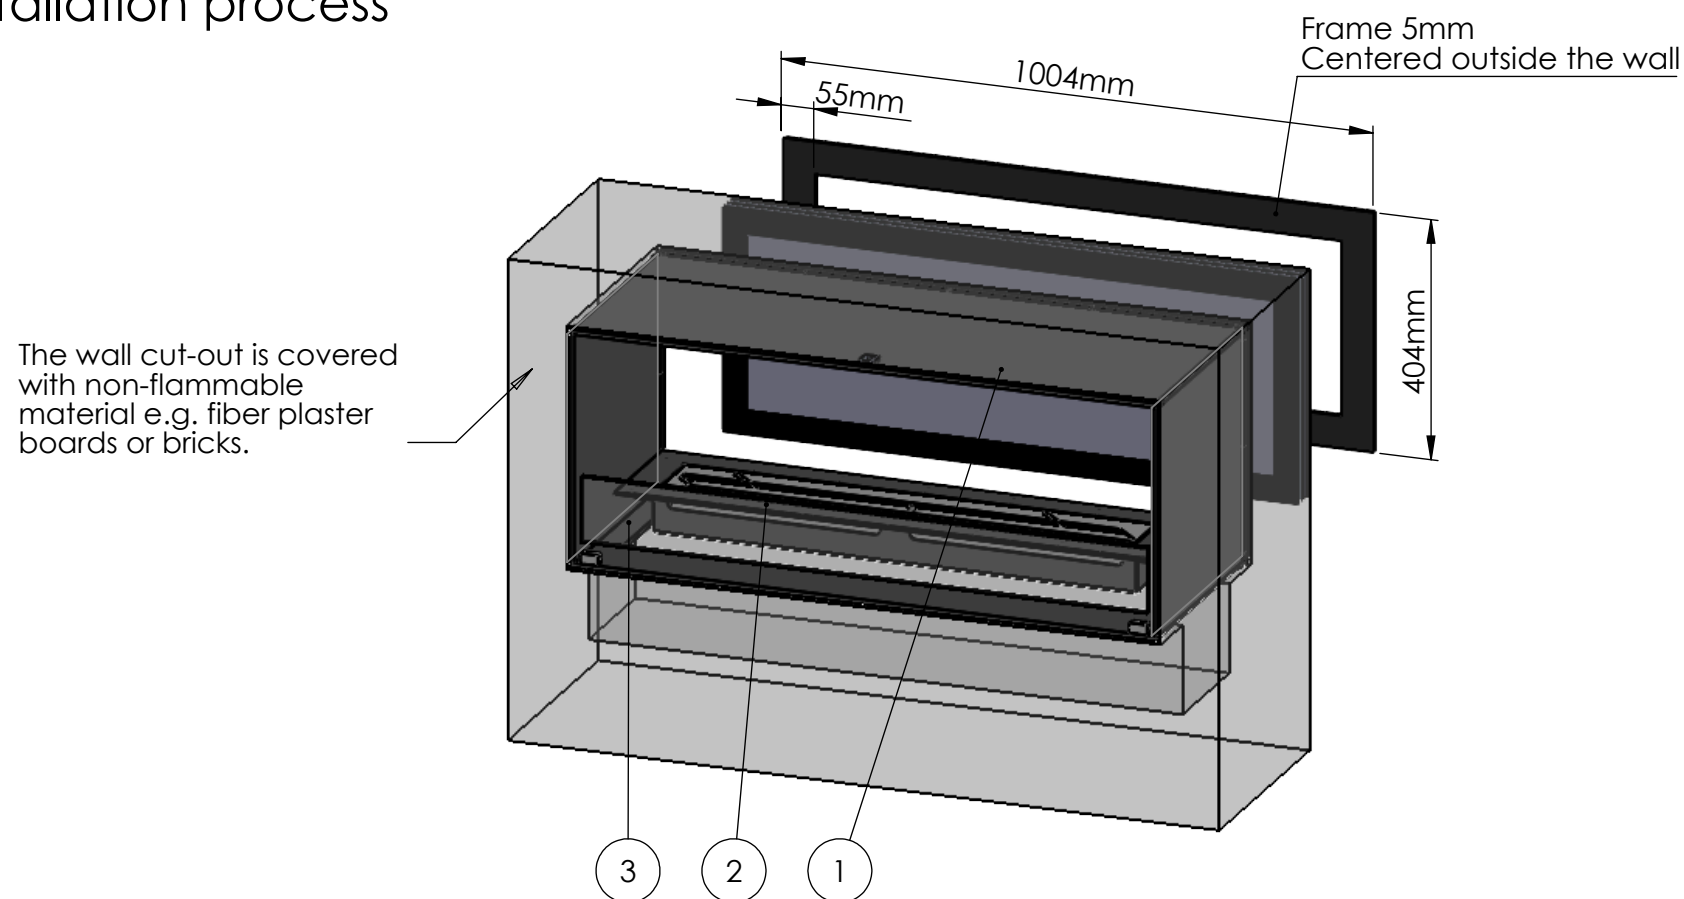

## Exploded view showing the installation process.

1. The body of the fireplace is centered in the wall cut out.

Glass back "Clear" sealed with heat resistant silicone.


Secured with the fasteners. Depending on type the of wall use suited wall plugs.

2. Connect to power socket and place the burner in the safety chamber.
3. Gently place the glass front on glass holders.


Dimensions are in millimeters		 DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com	SCALE: 1:10
REVISION:	Date		FORMAT: A3
-	14-07-2021		Page 3 OF 4
Author:		Order Number - Customer - Reference:	
TTK		PRINCIPLE Montreal Clear Front and Back - conv. 1000x400x408mm - 1x MB800 - low high glass	
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Customer Approval Signature - Date	

IMPORTANT INFORMATION


Particulars of the wall in which the fireplace shall be installed

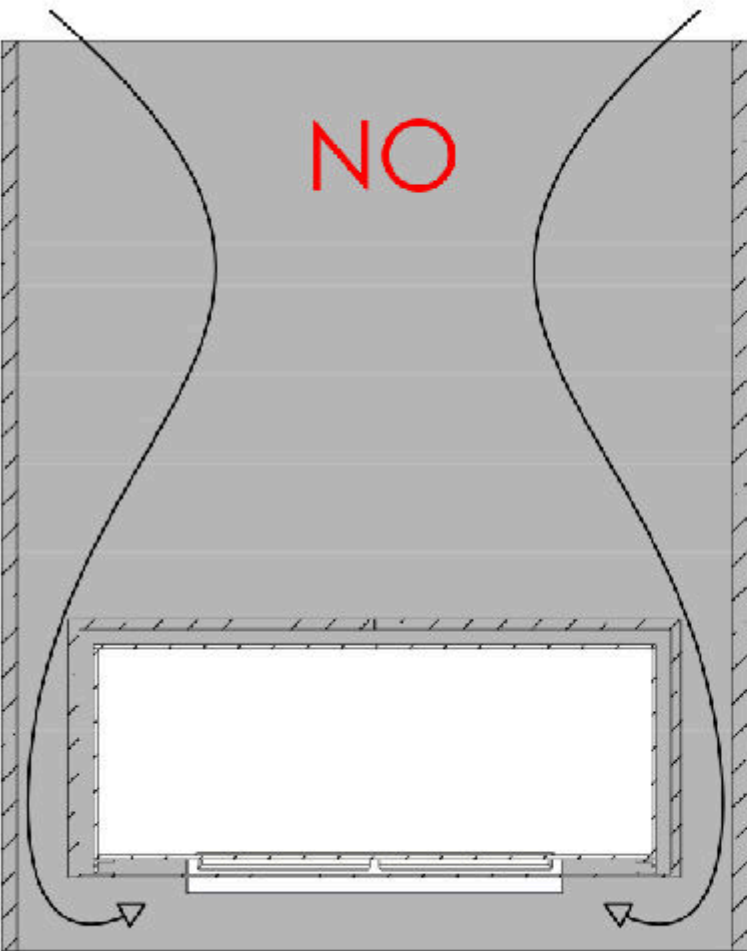


**DO NOT!** install the fireplace in a wall construction which is open above and below the fireplace. The warm air will cause turbulences inside this hollow construction which will have a negative impact on the flames.

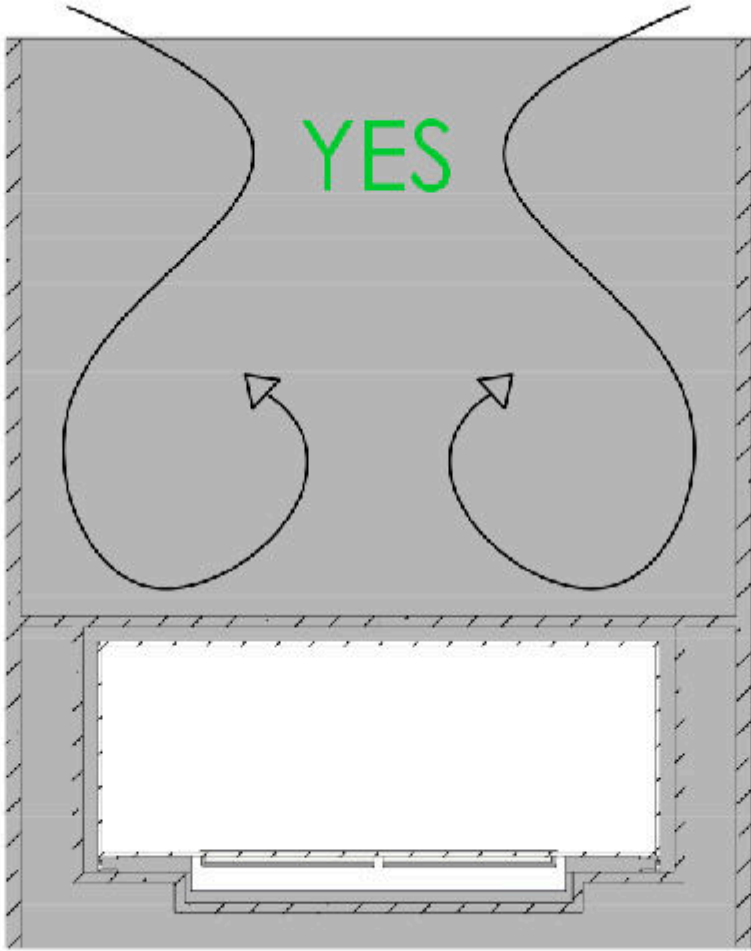

**DO!** install the fireplace in an open-wall construction, which is closed above and below the fireplace. Make sure to create a closed cavity for the section below the base plate of the fire.

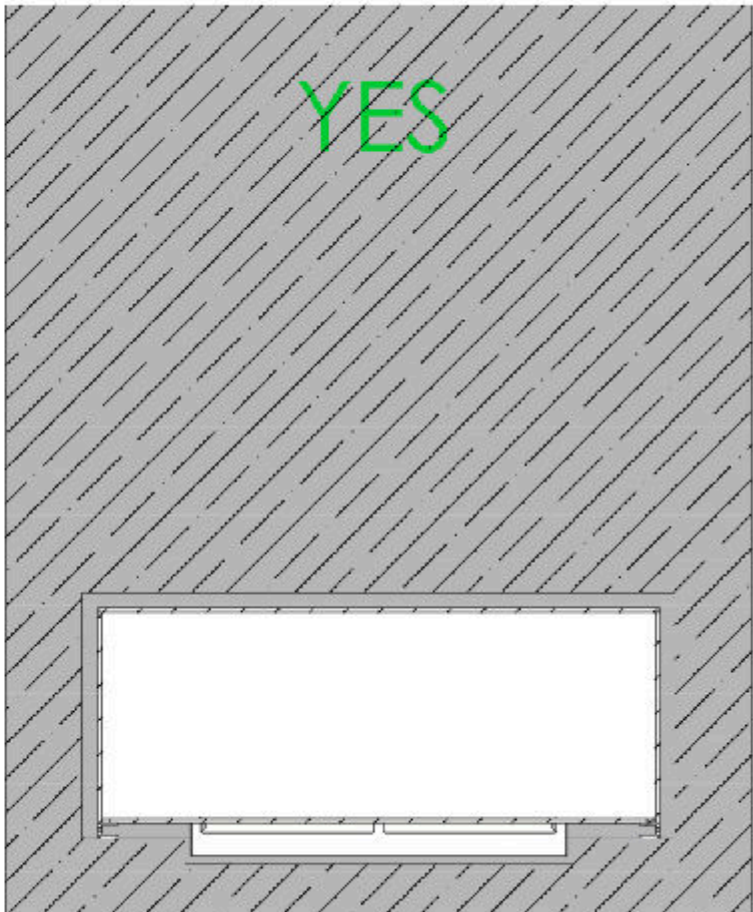

**DO!** install the fireplace in a massive wall (made of bricks, stone or gas beton) using the wall cut-out dimensions mentioned on the previous page.

Dimensions are in millimeters		 <div>DecoFlame ApS Vang Mark 2 9380 Vestbjerg TLF: +45 96 30 48 00 www.decoflame.com</div>	SCALE: 1:10
REVISION: -	Date 14-07-2021		FORMAT: A3
Author: TTK			Page 4 OF 4
Copyright of DecoFlame ApS Denmark, whose property this document remains. No part thereof may be disclosed, copied, duplicated or in any other way made use of, except with the approval of DecoFlame ApS.		Order Number - Customer - Reference:  PRINCIPLE Montreal Clear Front and Back - conv. 1000x400x408mm - 1x MB800 - low high glass	
		Customer Approval Signature - Date	